

# bonaVITA

BV3825B

1.0 L gooseneck electrical kettle

Customer assistant line:

USA 1-855- 664 -1252



**READ THE MANUAL BEFORE USE AND SAVE FOR THE FUTURE REFERENCE  
FOR HOUSEHOLD USE ONLY**

2 years limited warranty

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- **Read all instructions.**
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons, do not immerse cord, plugs, base or kettle in water or other liquid.
- Never leave the appliance unattended when in use. Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, no water in kettle, filling water, moving kettle and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Call our toll-free Customer Assistance Number for examination, repair or adjustment.
- Do not use a base unit other than the one supplied. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces. Always store excess portion of the power cord in the compartment of the base unit.
- Electric kettle must be operated on a flat surface. Do not place on or near a hot gas or electric burner, or in a heated oven, or on the top of other electric appliances.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn control to off, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- To avoid circuit overload, do not operate another high wattage appliance on the same circuit.
- Do not fill kettle when positioned on base. Remove all moisture on the bottom of the body before placing it onto the power base.
- Be aware of steam being emitted from spout or lid especially during refilling. Do not remove lid during boiling cycle.
- Do not use the kettle to heat anything other than water. Do not fill above the "max" indication. If the kettle is overfilled, boiling water may be ejected. The kettle is only to be used with the base unit provided.
- Do not insert any object into slots or holes of the kettle.
- Scalding may occur if the lid is removed during the brewing cycles.
- This appliance is for **HOUSEHOLD USE ONLY**.

## SAVE THESE INSTRUCTIONS

# ADDITIONAL SAFEGUARDS

**DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.**

## EXTENSION CORDS

A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply cord or extension cord is used,

- 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and
- 2) The extension cord should be a grounding-type 3-wire cord, and
- 3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally (especially by children).



## GROUNDING INSTRUCTIONS


This appliance must be grounded while in use.

**CAUTION:** To ensure continued protection against risk of electric shock, connect to properly ground outlets only.










## GROUNDING INSTRUCTIONS

The appliance has a plug that looks like Figure A. An adaptor, as shown in Figure B, should be used for connecting a 3-prong grounding plug to a 2-wire receptacle. The grounding tab, which extends from the adaptor, must be connected to a permanent ground such as a properly grounded receptacle as shown in Figure C, using a metal screw.

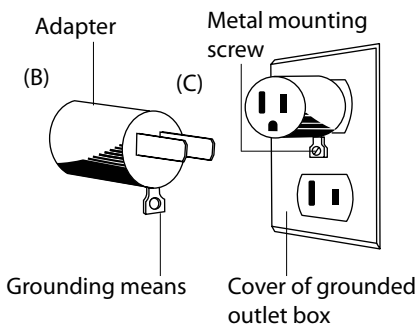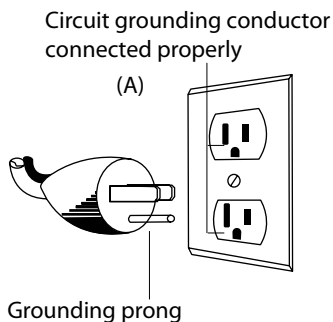

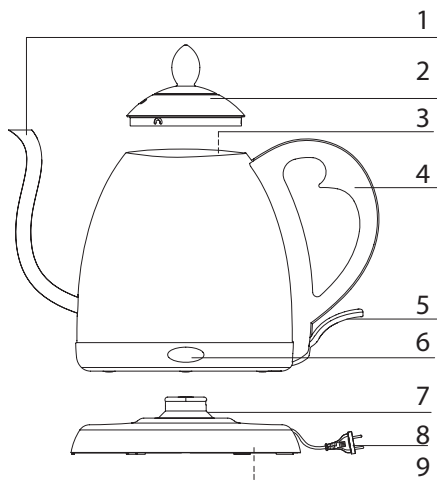

1. Spout
2. Lid
3. Water level
4. Handle
5. I/O switch, I=on, O=off
6. Indicator light
7. Base
8. Power plug with power cord
9. Cord storage

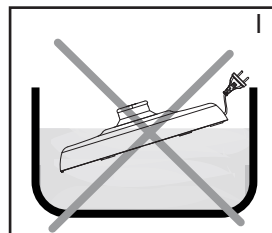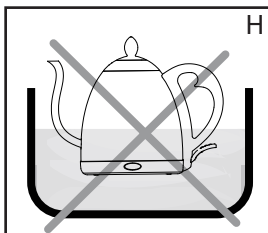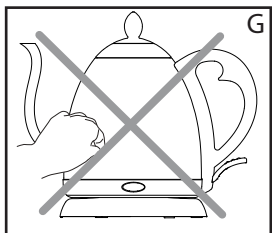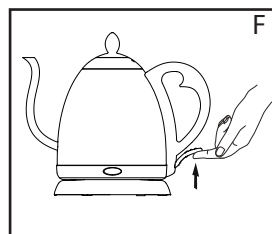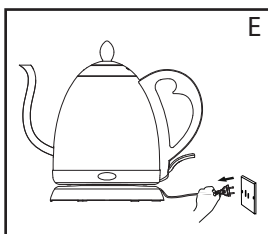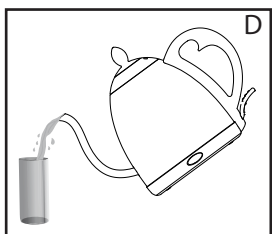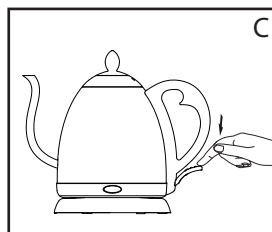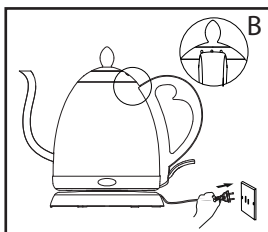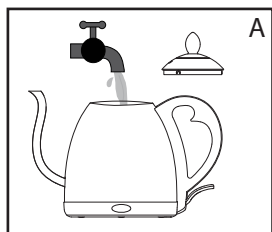

# OPERATION

## Before first use

- Remove all packaging materials, labels and/or stickers from your kettle.
- Clean your kettle thoroughly before using for the first time (→ *Cleaning*).
- Boil water at least 2 times and dispose, before boiling water for consumption.
- Remove the kettle from the base **(7)**. Take off the lid **(2)**.
- Fill the kettle with water (*ill. A*) up to the **max 1.0** marking
- After filling the kettle with water, insert the lid **(2)** into kettle with holes facing towards handle.
- Connect the power plug **(8)** to a wall outlet (*ill. B*). Press down the **I/O** switch **(5)** to on position to start boiling the water (*ill. C*).
- The indicator light **(6)** lights up. After boiling is finished, the kettle turns off automatically. Dispose of the hot water in the sink.

**WARNING:** Be careful when handling hot water. Danger of scalding!

- Let the appliance cool down 1 minute before boiling water again. Repeat this process before using water for consumption.

**WARNING:** Do not immerse the base **(7)** or the kettle in water or any liquids. This may cause electric shock or damage the appliance.

## Operating instructions

Before plugging the kettle into the wall outlet, check that the electrical circuit is not overloaded with other appliances.

- Set the base **(7)** on a flat, even and steady surface.
- Remove the kettle from the base **(7)**. Take off the lid **(2)**.
- Fill the kettle with water (*ill. A*) under the **max 1.0** marking. Do not fill over the **max** marking. See the water level **(3)** for adding the desired amount of water.
- After filling the kettle with water, insert the lid **(2)** into kettle with holes facing towards handle.
- Connect the power plug **(8)** to a wall outlet (*ill. B*).
- Press down the **I/O** switch **(5)** to on position to start boiling the water (*ill. C*). The indicator light **(6)** lights up.
- After boiling is finished, the kettle turns off automatically.
- Let the appliance cool down 1 minute before boiling water again.
- Pour the hot water into a heat resistant container (*ill. D*).
- Manually interrupt the boiling process by lifting up the **I/O** switch **(5)** to off position (*ill. E*).
- After each use remove the power plug **(8)** from the wall outlet (*ill. F*).

**WARNING:** The appliance is very hot during use. Do not touch (*ill. G*). Danger of burns!

**WARNING:** Never leave the kettle unattended while boiling water. Especially when there are children nearby.

**WARNING:** Do not open the lid **(2)** while boiling water.

# CLEANING

Clean the kettle regularly. This appliance contains no user serviceable parts and requires little maintenance. Leave any servicing or repairs to qualified personnel.

- Clean the outside of the base **(7)** and the kettle with a damp soft cloth.
- Clean the inside of the kettle with dishwasher detergent and rinse thoroughly with water.
- Do not use abrasive cleansers.
- After cleaning dry the kettle and the base **(7)** thoroughly.

**WARNING:** Never immerse the kettle (*ill. H*) or the base **(7)** (*ill. I*) in water or other liquids.

# DECALCIFYING

- Fill the kettle with a vinegar and water mixture ( $\frac{1}{2}$  vinegar and  $\frac{1}{2}$  water) up to the **max 1.0** mark.
- Open lid **(2)** and pour water into the kettle (*ill. A*).
- Close the lid **(2)** and place the kettle on the base **(7)**.
- Insert power plug **(8)** into a standard 120 V AC wall outlet (*ill. B*). Press down the **I/O** switch on/off **(5)** to start boiling the water (*ill. C*).
- Run through the complete brewing cycle with the decalcifying solution and repeat 3 times.
- After decalcifying, run through 2 complete boiling cycles with clear water.
- Clean the kettle afterwards ( $\hookrightarrow$  *Cleaning*).

# STORAGE

Clean and dry all parts before storing. Store the kettle in its box or in a clean, dry place. Never wrap the power cord **(8)** around the kettle. Always use the cord storage on the bottom of the base **(7)**.

# TECHNICAL DATA


Rated voltage:	120 V ~60 Hz
Rated current:	8.3 A
Rated power input:	1000 W
Capacity:	max. 33.8 oz (1.0 L)

# OPERATION

## Pour over manual brew coffee

This is the simplest coffee brewing approach. It allows the individual the most control of saturation of the coffee grounds, also the most participation by the user. It requires more time than hitting the On switch of a drip coffee maker but for many, its higher involvement is part of the pleasure of coffee overall.

### Equipment needed:

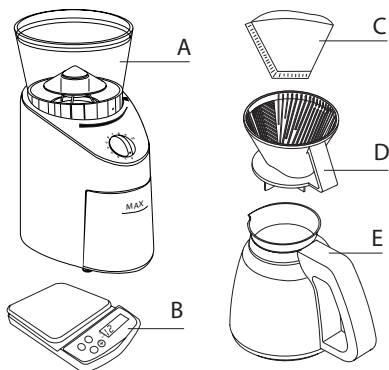

- A. Grinder
- B. Scale
- C. Paper filter, cloth or permanent filter
- D. Pour over filter basket ( Melitta, Chemex, Hario or something similar)
- E. Drinking cup or carafe
- F. Method for boiling water, (Bonavita gooseneck kettle recommended)

### Brewing manual pour over method:

- Measure about 6 ounces of water for each cup you intend to brew. Place measured water in kettle and turn on kettle to boil the water.
- Grind two tablespoons of beans per cup of coffee.
- Rinse the filter cone, filter, and coffee pot (or whatever you are brewing into) in hot water to preheat them.
- Assemble the filter cone, filter and vessel and dump the ground coffee into the filter.
- When the water reaches a boil, take the kettle off the heat source and count about five to fifteen seconds. The desired coffee brewing temperature is 205F so slightly lower than boiling temperature.
- Now pour the water into the filter. Stir the coffee just a bit to be sure it all gets saturated with water. A slow steady pour allows for the best extraction from the grounds.

### Tips:

- You may have to pour two or three times depending in the grind, filter size, and amount of coffee being made.
- Pre-wetting the coffee grounds a minute before start pour over helps extraction.
- A narrower spout allows better water flow control.
- Pour-over coffee is usually ground finer than drip coffee maker, but not as fine as espresso. If you are using a Melitta cone (which we recommend) the grind will be more fine than that if you used a flat-bottom filter.

# LIMITED WARRANTY

2 years limited warranty from the date of original purchase.

1. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim.
2. Defects that occurred due to improper connection, improper handling, or repair attempts by non-authorized persons are not covered by the warranty. The same applies for failure to comply with the use of consumables.(e.g. cleaning and decalcifying agents or waterfilters) that do not correspond to the original specifications.
3. Routine parts (e.g. Seals and valves, permanent filter) and fragile parts like glass are excluded from the warranty.
4. The device was designed and built for Household use only. It is not dedicated for other use.
5. Damages which are not under responsibility of the manufacturer are not covered by the warranty. This is valid especially for claims arising from improper use(e.g. operation with wrong type of current or voltage) .
6. The guarantee becomes void if repairs are carried out by third parties which are not authorized by the manufacturer to do so and/or if spare parts are used other than the original ones.

To make a warranty claim, do not return this appliance to the store. Please visit [www.bona-vita.biz](http://www.bona-vita.biz) or call 1-855-664-1252. For faster service, locate the model, type and series numbers on your appliance.